

# MeacoFan 360

## Osobisty cyrkulator powietrza



*Dziękujemy za wybór produktów Meaco, bardzo to doceniamy !*

**INSTRUKCJA OBSŁUGI PL**  
**360AC**

## SAFETY INFORMATION

### ATTENTION

This air circulator must not be used in rooms under the following conditions:

- Potentially explosive atmosphere
- Aggressive atmospheres
- Featuring a high concentration of solvents
- An extremely high ratio of dust
- Commercial environments

**Keep Children Away:** Do not allow children to play with or around this unit, which could result in injury. Be sure the unit is inaccessible to children when not attended.

**Protect Power Cord from Damage:** Never operate a unit with a damaged power cord, as this may lead to electrical or fire hazards. If the power supply cord is damaged, it must be replaced by a cord of the same type and amperage rating.

**Extension Cords:** Extension cords must be in good condition, grounded and able to deliver the appropriate voltage to the unit.

**Handle with Care:** Do not drop, throw or crash the air circulator. Rough treatment can damage the components or wiring and create a hazardous condition.

**Run on Stable Surface:** Always operate the unit on a stable, level surface, for example the floor or a strong counter, so that the air circulator cannot fall and cause injury.

**Keep Out of Water:** Never operate the unit in pooled or standing water, as this may create a risk of injury from electrical shock. Do not store or operate outdoors. If electrical wiring or components become wet, thoroughly dry them before using the unit. If in doubt do not use the air circulator and consult a qualified electrician or a Meaco approved engineer.

**Keep Air Intakes Clear:** Do not clog or block the air intakes by placing the air circulator too close to curtains, walls or anything that will restrict the air inlet. This may cause the unit to overheat and result in a fire or electrical hazard.

**Keep Electrical Components Dry:** Never allow water inside the air circulator's electrical components. If these areas become wet for any reason, thoroughly dry them before using the air circulator. If in doubt do not use the air circulator and consult a qualified electrician or a Meaco approved engineer.

**The operator must** make the operating instruction available for the user and make sure that the user does understand the manual.

### Power Supply

This power supply changes mains alternating current to touch safe low voltage (DC). The power supply is only designed for indoor use and should not come into contact with water or dust. To prevent overheating the power supply should not be covered when it is in use.

The mains socket should be easily accessible. In the event of operational error, the plug should be immediately removed from the socket. In the event that the mains cable becomes damaged, then the power supply should not be used.

The power supply contains potentially dangerous voltages internally and the cover should not be removed. All service or maintenance work should be carried out by qualified personnel.

You can get assistance by contacting Meaco (U.K.) Limited.

## 1. GENERAL ADVICE

**Before** putting your air circulator into operation for the first time, the instruction manual should be studied carefully.

**After receiving the unit**, you should check your air circulator for any transport damage. In case of damage, you should inform the sender immediately.

**Keep the packaging** for the air circulator in a safe place in order to be able to despatch the air circulator safely if it requires a service. In order to save space, you can simply cut through the adhesive tape using a knife and fold up the cardboard box.

## 2. PRODUCT IDENTIFICATION

- |    |                     |   |                  |   |                    |
|----|---------------------|---|------------------|---|--------------------|
| 1  | Przednia osłona     | 2 | Przednia skorupa | 3 | Nakrętka ostrza    |
| 4  | Łopatkę wentylatora | 5 | Uchwyt silnika   | 6 | Silnik wentylatora |
| 7  | Panel sterowania    | 8 | Baza             | 9 | Uchwyt*            |
| 10 | Tylna straż         |   |                  |   |                    |

## 3. CONTROL PANEL AND OPERATION



**ON/OFF Button** 

When plugged in the unit will display the room temperature on the display. To turn the unit on press the On/Off button. The unit will beep and the fan will start. To turn off press the ON/OFF button again, you will hear a longer beep and the fan will slow down and stop.

### Speed Button

Press the speed button on the control panel/remote controller to adjust the air flow fan speed. There are 12 fan speeds available. As long as the fan remains plugged in the MeacoFan will remember the last fan speed used.

### Oscillation Buttons (OSC)

This button can be used to start and stop the sideways oscillation left and right. Press once to turn the oscillation on and press again to stop the motion, in doing so you can fix the direction of the fan.

The up and down angle can be fixed manually by hand, place one hand on the base and one hand on the top of the fan and gently move the head up or down as required.

### Timer Button

When the fan is standby state, you can use the timer button to set an interval between, in 30 minute segments, 1 and 6 hours after which the fan will turn ON.

When the fan is turned on and running, you can use the timer button to set an interval, in 30 minute segments, between 1 and 6 hours after which the fan will turn OFF.

## 4. ELECTRICAL CONNECTIONS AND OPERATING CONDITIONS

This air circulator was designed to operate in a 220V-240V / 50Hz electrical installation. Make sure that the electric sockets are connected to earth and that all safety precautions are taken.

This air circulator can be operated within an ambient temperature range from +5°C to +40°C and with a non-condensing relative humidity.

## 5. SPECIFICATIONS



Model	MeacoFan 360
Operating conditions	+5°C to +40°C
Humidity operating range	Non-condensing
Fan motor type	Low energy 5V DC
Maximum air flow	360 cubic metres per hour
Power supply	220 - 240V / 50Hz
Power consumption	2.5 to 10 watts
Oscillation swing angles	60° up and 20° down manually. 38° left and 38° right.
Noise level	15 to 50dB
Air circulator Dimensions (mm)	213.5 x 209 x 298mm
Box dimensions (mm)	255 x 235 x 335mm
Nett / Gross Weight (Kgs)	1.36 / 2.0Kgs

## 6. TROUBLESHOOTING

Trouble	Suggestion	Further action
No power to the fan	No power to the unit	Plug the unit in to the power socket and turn the socket on.
	Fan not turned on	Press the On button.
On button does not work	Check instructions above	If it still does not work then contact Meaco.
Oscillation does not work	Press oscillation button	If the oscillation button does not work then contact Meaco.
Increased noise level	Fan blades dirty	Clean the fan blade as per the maintenance section of the manual.
	Fan blades or fan motor loose	Tighten the fan blade as per the maintenance section of the manual.
	Fan motor fault	Contact Meaco

## 7. CLEANING AND STORAGE

Always turn the fan off and unplug it from the socket before cleaning. Clean the fan with a soft, dry cloth, do not allow the fan to get wet.

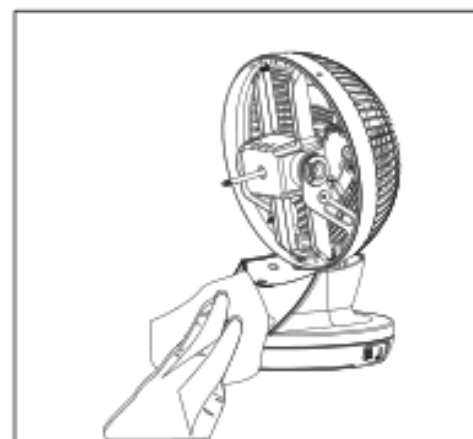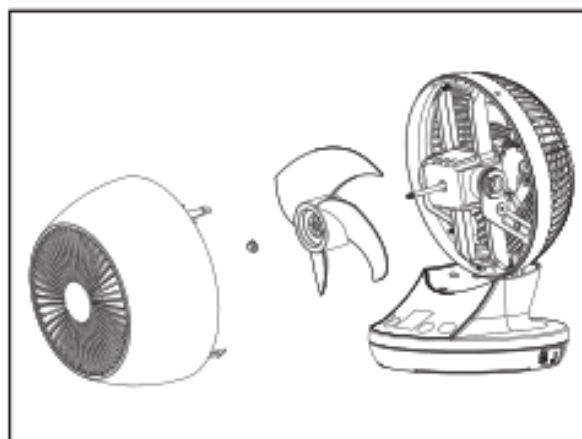

- There are four lugs and one screw to be disengaged in order to remove the front fan guard.
- Unscrew the nut to release the fan blade.
- Dry wipe the fan to clean it, do not get parts wet.
- Reserve the above procedure to put the fan back together.

Store in its plastic bag or original box to protect the fan from dust.

Remember the fan can be used in winter to help distribute warm air more effectively in a room.

## 8. WARRANTY AND CUSTOMER SERVICE

There is a two year warranty on your air circulator from the date of purchase. Please register your warranty at [www.meaco.com](http://www.meaco.com), as a thank you we will enter you into our monthly free prize draw.

All material or manufacturing defects will be repaired free of charge.

The following applies:

- Any repairs or replacement of components during the warranty period will not result in an extension of the warranty period.
- The warranty will expire if any alterations have been made, not genuine components have been fitted or if the air circulator has been repaired by a third party.
- Components subject to normal wear and tear, are not covered by the warranty.
- The warranty is only valid on presentation of the original, unaltered, and date-stamped purchase receipt.
- The warranty does not cover damage caused by actions that deviate from those as described in the user's manual or by neglect.
- The warranty does not cover faults caused by dirt or third party products.
- The warranty does not cover accidental damage.
- All claims for compensation, including consequential damage, will not be entertained.

To prevent unnecessary expenses, we recommend that you always carefully read the user's manual first. If this does not provide a solution, call Meaco and we will be happy to help.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This air circulator has been imported into the U.K. by;

Meaco (U.K.) Limited  
Meaco House  
Parklands  
Railton Road  
Guildford  
GU2 9JX

Telephone: 01483 234900  
Email: [service@meaco.com](mailto:service@meaco.com)  
Website: [www.meaco.com](http://www.meaco.com)  
Fax: 01483 232700

Please record, for future reference, your date of purchase and where you bought the air circulator from here.

Date of purchase.....

Purchased from [www.meaco.com](http://www.meaco.com) (if not then please record the supplier's name below).

Serial number:.....

If you do develop a fault at any time then please do call us and we will always try and help you as best we can.

Please save the box just in case we need to collect the fan from you for a service.